Haier

MODEL HR-170T/A

REFRIGERATORS OPERATING INSTRUCTIONS

* The manufacturer keeps on developing various types of refrigerators, so he has the right to modify designs, products and technical data without further notice.

VC532007
No.0060507900

FIGURATION OF THE REFRIGERATOR

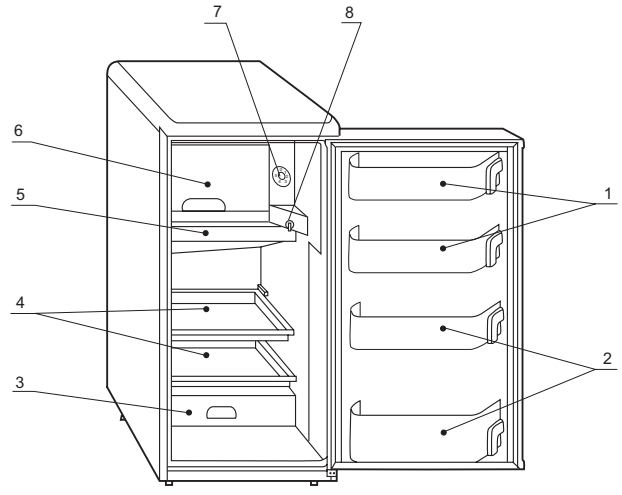

1. Low bottle support
2. High bottle support
3. Vegetable box
4. Shelf
5. Drip tray
6. Evaporator
7. Thermostat
8. Light Switch

The manufacturer reserves the right to improve the product from time to time without further notice.

NOTICE

- The power supply for appliance is 220-240V, 50Hz Single phase.
- It is not recomended to use any extention cords.
- Connect the appliance with a properly earthed three-wire plug and socket with a special use.
- Never store anything dangerous in the appliance, such as combustibles, exposives, strong acid and alkali. etc.

SETTING UP

- The appliance can be placed with its rear panel directly against the wall. For a good air circulation, the vent grille at the back of the worktop must not be blocked, It should be placed on flat and firm ground lest it gives off higher noise than usual.

- Poorly ventilated rooms are unsuitable. Avoid positioning the appliance in direct sunshine or exposed to similar sources of heat.

LAMP AND LAMP REPLACEMENT

Lamp: 220-240V,15W
Lamp holder: E14 (lamps exceeding 15W must not be used)
When replacing the lamp:
* Unplug to disconnect the power and remove the water tray.
* Press the positioning pin of the lamp with left hand, and release the shade from the lamp holder by sliding it to the right side. Turn the lamp anti-clockwise for removing.
* Replace the water tray.

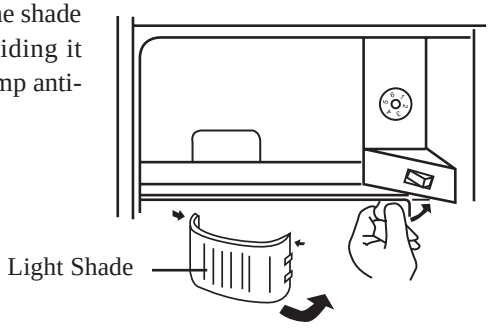

ELECTRICAL DIAGRAM

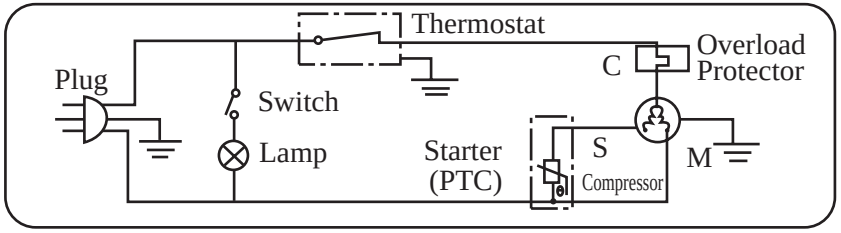

In the event of a fault occurring during operation, check first if the fault is due to an operation error. You can repair the following faults yourself.

● The appliance does not run.	1. It is not switched on properly, or mains plug properly inserted in the socket. 2. The thermostat knob is turned to position “0”. 3. Supply voltage is too low.
● The temperature inside the appliance is not low enough.	1. The appliance is too full of food. 2. The appliance is located too near a source of heat. 3. The door is not properly closed or is opened too frequently. 4. The vent grille is covered over.
● Excessive noise from the appliance.	The appliance is not standing securely on the ground.

If none of these circumstances applies and you are not able to repair the fault, please Contact the service point.

THERMOSTAT

● The knob graduation 0, 1, 2, 3, 4, 5, 6, 7, does not stand for concrete temperature.The smaller the numbers,the higher the temperature in the compartment and vice versa.Usually,it’s better to put the thermostat in Pos. “1”,Pos. “4”.Pos. “0” shows the power is cut off.

STORING FOOD

● The temperatures in different positions inside the refrigerator are different due to different refrigeration distribution.Thus when store food, select proper position to meet your needs.

● The coldest position is ①, Temperature from low to high in order as ②③④⑤.

ICE-MAKING

● When making ice,add water to the ice tray until 4/5 full with the grid in it and place it on the bottom of the ice chamber. Twist the tray or place it briefly in warm water to remove the ice cubes.

● NOTE
Do not use a knife and the like when removing the ice tray.

NOTES ON STORAGE

- Where necessary, food should be packed in bags, avoiding giving off strong odours or getting wet or dry.

- Do not store food too full in the appliance. Allow space among the packages of food for a perfect refrigerating.

- Hot food or liquid must be allowed to cool to room temperature before placing in it.

CLEANING

- The appliance can only be cleaned at drawn network plug. Clean it with lukewarm water containing a little detergent. In any case do not use hot water,corrosive scouring agent and anything rough.

- NOTE
  Do not use anything rough for cleaning.

DEFROSTING

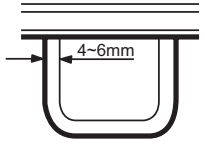

- When defrosting, switch off the appliance. Remove food from the ice chamber,it will be defrosted automatically.When defrosting process has been completed, the drip-tray should be depleted. Replace the food and switch on the appliance.

NOTES

- If the appliance remains out of use for some time, pull out the plug to disconnect the appliance from power supply. Clean the interior as described

above to prevent odours from forming inside.

- The appliance door should be opened as little and briefly as possible to reduce energy consumption

- In the event of power failure,try to keep the appliance closed to maintain the refrigeration as long as possible.